


HTC Desire 620


Inserting your micro SIM and microSD cards

IMPORTANT: USE A STANDARD MICRO SIM ONLY.


Inserting a smaller size SIM, such as a nano SIM with an adapter or a modified SIM, may cause the card to not fit properly or damage the card slot.

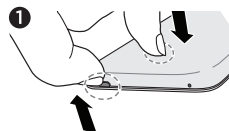


1. Make sure your phone is off and is facing down. From the USB port, remove the back cover with your finger.

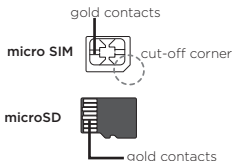

2. With the gold contacts facing down and the cut off corner facing in, insert the micro SIM card into the slot.

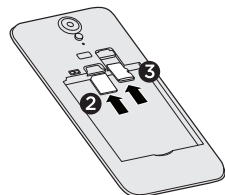


3. With your microSD™ card's gold contacts facing down and the narrow side facing in, insert the microSD card into the slot on the right.

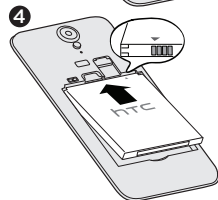

4. Insert the battery.

5

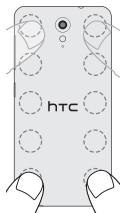

5. To replace the back cover, align the edges and press down on the cover from top to bottom along the edges until it clicks into place.

Want some guidance on using your phone?

On your phone, check out our friendly walkthroughs in the **Tips & Help** app. For self-help in troubleshooting basic problems, you can use the **HTC Guide** app. Or go to www.htc.com/support/ to find tutorials, the user guide, FAQs, latest news, and more.

 
© 2014 HTC Corporation. All rights reserved.

HTC, the HTC logo, and HTC Desire are trademarks of HTC Corporation.

microSD is a trademark of SD-3C LLC.

All other company, product and service names mentioned herein are trademarks, registered trademarks or service marks of their respective owners.

htc.com



91H0xxxx-xxM Rev.A